


CAREL UM Series Parts List


Cleaning The Drain Valve

Remove the drain valve group and disassemble it. Clean all parts in the same way as the fill valve, reassemble and reinstall.

After cleaning and reassembly, restart your humidifier according to the Startup Instructions contained in this manual.

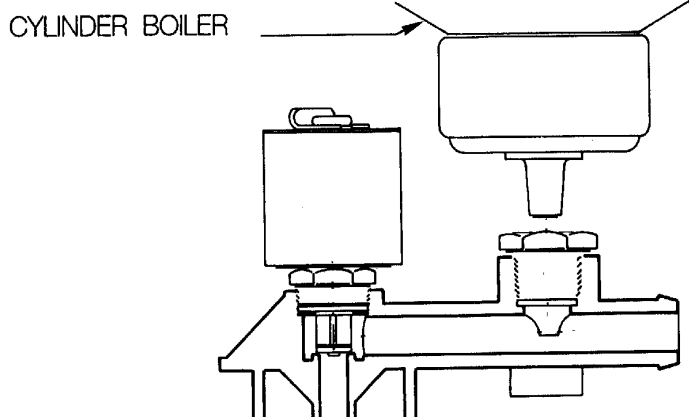

Hydraulic Parts

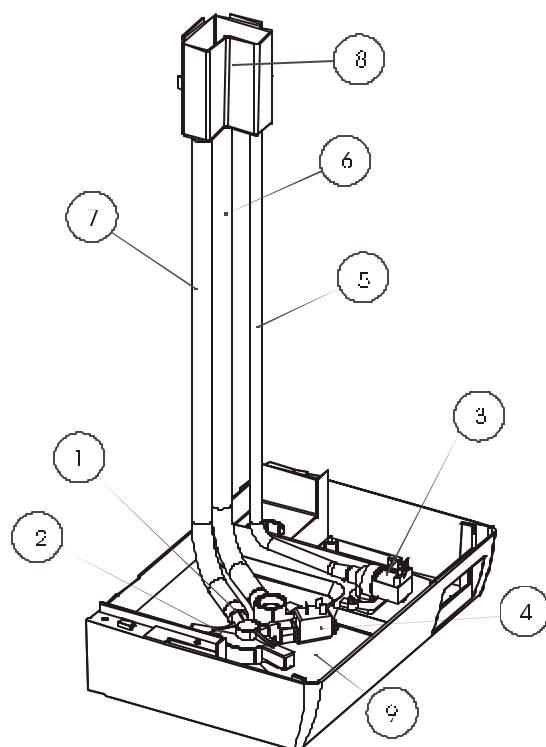

No.	Description
1	Fastening o-ring for s/d (supply - drain) manifold
2	Supply/drain manifold
3	Water fill valve
4	Drain valve
5	Fill cup supply hose
6	Cylinder supply hose
7	Overflow hose
8	Fill cup with conductivity probes
9	Base / drain pan

See spare parts list on page 20

Clean the drain pan and fill cup of any deposits and check that the water flows freely from the fill cup to the drain.

Check that there are no blockages or solid particles and that the conductivity measuring electrodes are clean. Remove any impurities and rinse.

Fuses in the auxiliary circuits

The dimensions of these are 10.3x38 mm and are contained in cartridge-type fuse holders; to check the condition of the fuses, check continuity using a tester.
Use fuses with the settings indicated in the following table.

Fuses 1 - 2	1A fast-blow
Fuse 3 *	2A slow blow

* 5 x 20 mm, only on the control board.

Spare parts

Description	Code Fill
Cup	18C453A008
Drain Valve	13C476A050
Internal tubing kit	UEKT0000S
Steam Cylinder	BL0S1F00H0
208-230/24 power transformer	09C481A003
Control board with LED support panel	LIMCC000000
Fill Valve	KITVC00006